

The **PROJOLLY** line in polished aluminium offer innumerable opportunities of combining them with ceramics, wood, marble, etc. It facilitates the laying process eliminating the fragile ceramic corner tiles. It is also used for external angles of tiles, in order to terminate the finishing of wall coverings, for platforms, stair steps, bathtubs, etc. It guarantees the impeccable work, ensuring considerable aesthetic effect as well. Thanks to its round finishing it strengthens the tile edge and prevents from their chipping and breakages. Required by new European regulations on safety and accident prevention in public and private places. Available in capsules and three-axial joints for internal and external angles. Chromatic combining with **PROLISTEL** and **PROLISTEL** panelists in polished aluminium recommended.

PROJOLLY


POLISHED ALUMINIUM
CHROME-COPPER-TITANIUM-GOLD-BLACK



POLISHED ALUMINIUM (chrome-copper-titanium-gold-black) thermo packed bar length 2,7 LM - packaging 40 Pcs - 108 LM (H 15 mm - 54 LM)

Article	H mm	
PJBC 06 (polished chrome)	6	
PJBO 06 (polished gold)	6	
PJBR 08 (polished copper)	8	
PJBT 08 (polished titanium)	8	
PJBO 08 (polished gold)	8	
PJBC 08 (polished chrome)	8	
PJBN 08 (polished black)	8	
PJBR 10 (polished copper)	10	
PJBT 10 (polished titanium)	10	
PJBO 10 (polished gold)	10	
PJBC 10 (polished chrome)	10	
PJBN 10 (polished black)	10	
PJBR 125 (polished copper)	12,5	
PJBT 125 (polished titanium)	12,5	
PJBO 125 (polished gold)	12,5	
PJBC 125 (polished chrome)	12,5	
PJBN 125 (polished black)	12,5	
PJBC 15 (polished chrome)	15	

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

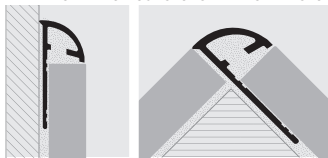

1. Choose the PROJOLLY with suitable height for the thickness of the covering. 2. Apply the adhesive onto the area of application of the profile. 3. Lay and align the profile, cut to the necessary length, pressing the perforated flange into the adhesive. 4. Lay the tiles, aligning them so that the top edge of the profile is flush with the tile. 5. Fill the profile/bite area of contact with adhesive to prevent the accumulation of water in any voids. **IMPORTANT:** Pay attention to the external edges of the aluminium Projolly. They must be protected against agents such as adhesives and sealants and against grinding or scraping actions.

PJ... 03		H 3 mm	H 3 mm details at page 57
PJ... 045		H 4.5 mm	H 4.5 mm details at page 57
PJ... 06			H 6 mm
PJ... 08			H 8 mm
PJ... 10			H 10 mm
PJ... 125			H 12.5 mm
PJBC 15			H 15 mm

COLOURS

(for a precise assessment of colours and finishes, see the relative enclosed sheet)



CAPSULES, END CAPS AND JOINTS for tri-axial joints

POLISHED ALUMINIUM (chrome, copper, titanium, gold, black) / PLASTIC

END CAPS - POLI. ALUMINIUM chrome, copper, titanium, gold, black

Article	H mm	10 pcs	2 pcs
TPJ... 06-08-10-125-15/...	6-8-10-125-15		

JOINTS - PLASTIC

Article	H mm	10 pcs	2 pcs
GIJA 06 08-10-125-15/...	6-8-10-125-15		

Choose the desired packaging: E.g. GIJA .../10 (pack 10 pcs)
GIJA .../2 (pack 2 pcs)

LEFT CAPSULES POLISHED ALUMINIUM chrome, copper, titanium and gold

Article	H mm	10 pcs	2 pcs
CPJBC/BO 06/... (outside)	6		
IPJBC/BO 06/... (inside)	6		
CPJBC/BO 08/... (outside)	8		
IPJBC/BO 08/... (inside)	8		
PJBR 08/... (outside)	8		
IPJBR 08/... (inside)	8		
CPJBT 08/... (outside)	8		
IPJBT 08/... (inside)	8		
CPJBC/BO 10/... (outside)	10		
IPJBC/BO 10/... (inside)	10		
PJBR 10/... (outside)	10		
IPJBR 10/... (inside)	10		
CPJBT 10/... (outside)	10		
IPJBT 10/... (inside)	10		
CPJBC/BO 125/... (outside)	12,5		
IPJBC/BO 125/... (inside)	12,5		
CPJBR 125/... (outside)	12,5		
IPJBR 125/... (inside)	12,5		
CPJBT 125/... (outside)	12,5		
IPJBT 125/... (inside)	12,5		
CPJBC 15/... (outside)	15		
IPJBC 15/... (inside)	15		

Choose the desired packaging: E.g. CPJBC.../10 (pack 10 pcs)
CPJBC.../2 (pack 2 pcs)

LEFT CAPSULES POLISHED ALUMINIUM black

Article	H mm	10 pcs	2 pcs
CPJBN 08/...	8		
IPJBN 08/...	8		
CPJBN 10/...	10		
IPJBN 10/...	10		
CPJBN 125/...	12,5		
IPJBN 125/...	12,5		


The right capsules are available on demand and must be used only in the following cases:

A) when you are laying the cut base of the profile perpendicularly on the floor;



Add "D" to the article code. For example: CPJDBC 06. Add "D" to the article code. For example: IPJDBC 06.

B) as an alternative to end-caps (right side).

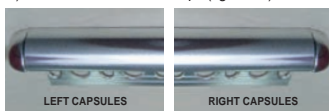

Add "D" to the article code. For example: CPJDBC 06.

END CAP



TPJ... 06-08-10-125-15/...

JOINT



GIJA 06-08-10-125-15/...

OUTSIDE CAPSULES



CPJ...
06-08-10-125-15/...



CPJD...
06-08-10-125-15/...

INSIDE CAPSULES



IPJ...
06-08-10-125-15/...




IPJD...
06-08-10-125-15/...

* = Upon request, price and delivery time to be agreed.

PROJOLLY

POLISHED BRUSHED ALUMINIUM
BLACK-SILVER-COPPER-TITANIUM

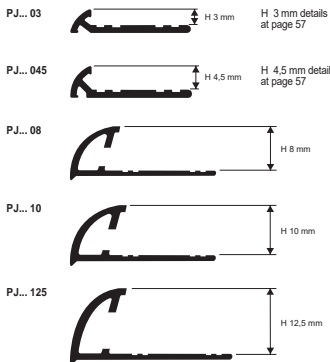


PROJOLLY facilitates installation, eliminating the fragile ceramic trim. It is used for outside corners of tiles to complete the finish of wall coverings, decking, steps, bathtubs, etc. Impeccable, precise work is ensured with a superior aesthetic effect. It strengthens the tile edge, thereby preventing chipping and breakages. Required by European standards for safety and hygiene in public and private environments. End caps and three-way inside and outside corner linking elements are available. Match with the **PROLISTEL** strips in anodised or polished aluminium.



POLISHED BRUSHED ALUMINIUM (silver-copper-titanium-black)
thermo packed - bar length 2,7 LM - packaging 40 Pcs - 108 LM

Article	H mm		
PJBS 08	8		
PJRS 08	8		*
PJTS 08	8		
PJNS 08	8		
PJBS 10	10		
PJRS 10	10		
PJTS 10	10		
PJNS 10	10		
PJBS 125	12,5		
PJRS 125	12,5		
PJTS 125	12,5		
PJNS 125	12,5		

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

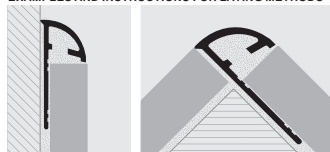

1. Choose the PROJOLLY with suitable height for the thickness of the covering.
 2. Apply the adhesive onto the area of application of the profile.
 3. Lay and align the profile, cut to the necessary length, pressing the perforated flange into the adhesive.
 4. Lay the tiles, aligning them so that the top edge of the profile is flush with the tile.
 5. Fill the profitable area of contact with adhesive to prevent the accumulation of water in any voids.
- IMPORTANT:** Pay attention to the external edges of the aluminium Projolly. They must be protected against agents such as adhesives and sealants and against grinding or scraping actions.

COLOURS

(for a precise assessment of colours and finishes, see the relative enclosed sheet)



CAPSULES, END CAPS and JOINTS for tri-axial joints

POLISHED BRUSHED ALUMINIUM (silver-copper-titanium-black) / PLASTIC

LEFT CAPSULES BRUSHED ALUMINIUM (silver-copper-titanium-black)

Article	H mm	10 pcs	2 pcs
CPJBS 08/... (outside)	8		
IPJBS 08/... (inside)	8		
CPJRS 08/... (outside)	8		
IPJRS 08/... (inside)	8		
CPJTS 08/... (outside)	8		
IPJTS 08/... (inside)	8		
CPJNS 08/... (outside)	8		
IPJNS 08/... (inside)	8		
CPJBS 10/... (outside)	10		
IPJBS 10/... (inside)	10		
CPJRS 10/... (outside)	10		
IPJRS 10/... (inside)	10		
CPJTS 10/... (outside)	10		
IPJTS 10/... (inside)	10		
CPJNS 10/... (outside)	10		
IPJNS 10/... (inside)	10		
CPJBS 125/... (outside)	12,5		
IPJBS 125/... (inside)	12,5		
CPJRS 125/... (outside)	12,5		
IPJRS 125/... (inside)	12,5		
CPJTS 125/... (outside)	12,5		
IPJTS 125/... (inside)	12,5		
CPJNS 125/... (outside)	12,5		
IPJNS 125/... (inside)	12,5		

Choose the desired packaging: E.g. CPJBS .../10 (pack 10 pcs)
CPJBS .../2 (pack 2 pcs)


END CAPS - BRUSHED ALUMINIUM (silver-copper-titanium-black)

Article	H mm	10 pcs	2 pcs
TPJ... 08-10-125/...	8-10-12,5		

JOINTS - PLASTIC

Article	H mm	10 pcs	2 pcs
GIJA 08-10-125/...	8-10-12,5		

END CAP

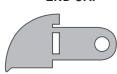

TPJ... 08-10-125/...

JOINT



GIJA 08-10-125/...

OUTSIDE CAPSULES



CPJ...
08-10-125/...



CPJD...
08-10-125/...

INSIDE CAPSULES



IPJ...
08-10-125/...



IPJD...
08-10-125/...


The right capsules are available on demand and must be used only in the following cases:

A) when you are laying the cut base of the profile perpendicularly on the floor;



Add "D" to the article code. For example: CPJDBS 08. Add "D" to the article code. For example: IPJDBS 08.

B) as an alternative to end-caps (right side).

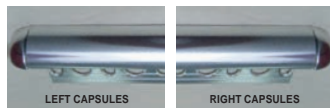

Add "D" to the article code. For example: CPJDBS 08.

* = Upon request, price and delivery time to be agreed.

PROJOLLY facilitates installation, eliminating the fragile ceramic trim. It is used for outside corners of tiles to complete the finish of wall coverings, decking, steps, bathtubs, etc. Impeccable, precise work is ensured with a superior aesthetic effect. It strengthens the tile edge, thereby preventing chipping and breakages. Required by European standards for safety and hygiene in public and private environments. End caps and three-way inside and outside corner linking elements are available.

PROJOLLY

VARNISHED ALUMINIUM




VARNISHED ALUMINIUM (HOT-WORKED 200°) thermo packed
bar length 2,7 LM - Pack. 20 Pcs-54 LM (White colour 108 LM)

Article	H mm		
PJA 06-01 (white)	6		
PJA 08...	8		
PJA 10...	10		
PJA 125-01 (white)	12,5		



With H 8 and 10 mm available in the colours: 01 - 0106 - 0311 - 06 - 11 (02-03-0211-10-17 available upon request with a minimum quantity order).
The code of the selected colour must be added to the article code. E.g.: PJA 08... (chosen colour White) PJA 08-01.

UPON REQUEST MAY BE REALISED IN OTHER FINISHES OF THE COLOUR CHART.
CONTACT OUR CUSTOMER SERVICE FOR MINIMAL QUANTITY, TIMING AND PRICE. PJA 06-... & PJA 125-... FOR COLOURS DIFFERENT FROM WHITE CONTACT THE COMPANY FOR QUANTITY AND PRICE


COLOURS

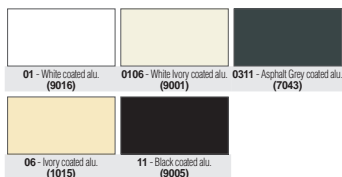

AVAILABLE minimum quantity 540 LM by colour and height (price and delivery time to be agreed)

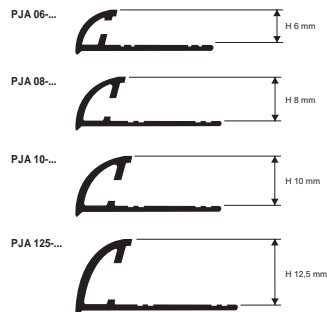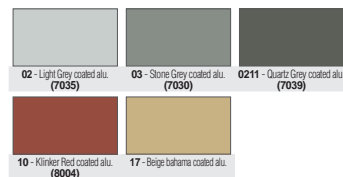

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

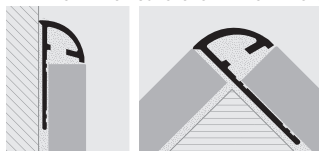

1. Choose the PROJOLLY with suitable height for the thickness of the covering.
 2. Apply the adhesive onto the area of application of the profile.
 3. Lay and align the profile, cut to the necessary length, pressing the perforated flange into the adhesive.
 4. Lay the tiles, aligning them so that the top edge of the profile is flush with the tile.
 5. Fill the profile area of contact with adhesive to prevent the accumulation of water in any voids.
- IMPORTANT:** Pay attention to the external edges of the aluminium Projolly. They must be protected against agents such as adhesives and sealants and against grinding or scraping actions.

CAPSULES, END CAPS and JOINTS for tri-axial joints

VARNISHED ALUMINIUM / PLASTIC

LEFT CAPSULES VARNISHED ALUMINIUM (HOT-WORKED 200°)

Article	H mm		10 pcs	2 pcs
CPJA 06-01/... (outside)	6			
IPJA 06-01/... (inside)	6			
CPJA 08-.../... (outside)	8			
IPJA 08-.../... (inside)	8			
CPJA 10-.../... (outside)	10			
IPJA 10-.../... (inside)	10			
CPJA 125-01/... (outside)	12,5			
IPJA 125-01/... (inside)	12,5			

With H 8 and 10 mm available in the colours: 01 - 0106 - 0311 - 06 - 11 (02-03-0211-10-17 available upon request).
The code of the selected colour must be added to the article code. E.g.: CPJA 08-.../... (chosen colour White) CPJA 08-01/10.

END CAPS - VARNISHED ALUMINIUM (HOT-WORKED 200°)

Article	H mm		10 pcs	2 pcs
TPJA... 06/...	6			
TPJA... 08/...	8			
TPJA... 10/...	10			
TPJA... 125/...	12,5			

JOINTS - PLASTIC

Article	H mm		10 pcs	2 pcs
GJA 06/...	6			
GJA 08/...	8			
GJA 10/...	10			
GJA 125/...	12,5			

Choose the desired packaging: E.g. GJA .../10 (pack 10 pcs)
GJA .../2 (pack 2 pcs)


The right capsules are available on demand and must be used only in the following cases:

- A) when you are laying the cut base of the profile perpendicularly on the floor;



Add "D" to the article code. For example: CPJDA 06-01. Add "D" to the article code. For example: IPJDA 06-01.

- B) as an alternative to end-caps (right side).

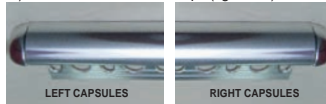

Add "D" to the article code. For example: CPJDA 06-01.

OUTSIDE CAPSULES




CPJA... 06-08-10-125/... CPJDA... 06-08-10-125/...

INSIDE CAPSULES



IPJA... 06-08-10-125/... IPJDA... 06-08-10-125/...

END CAP



TPJA... 06-08-10-125/...

JOINT



GJA 06-08-10-125/...